

# Dualit<sup>®</sup>

## BEAN TO GO MACHINE

---

# WARNING

If the machine enters power saving mode during the descale cycle, indicated by the Power Button only illuminating, simply remove the Water Tank entirely from the machine and replace. Wait 10 seconds and the descale light should come back on and descale cycle will restart. Repeat Water Tank removal and replacement if this does not work the first time.

Do not press any buttons unless stipulated in the descale instructions. **Caution:** Failure to do this may cause the descale cycle to fail, and you will need to start again.

**Important:** Always make sure you have filled the Water Tank to the Max Mark when the indicator light tells you to do so.

**Failure to fill the Water Tank to Max Mark, when instructed to do so, will prevent the completion of the descale cycle, and the descale warning light will stay illuminated.**

If you see the Water Tank Warning Symbol illuminate during descale, the machine needs more water. Fill the Water Tank to the max mark, and the cycle will automatically continue.

**Caution:** If you allow it to do this 3 times or more, the machine will automatically cancel the descale cycle and you will have to start again.