 


Mini Oven

Instruction Manual & Guarantee

Dualit®

Since 1945

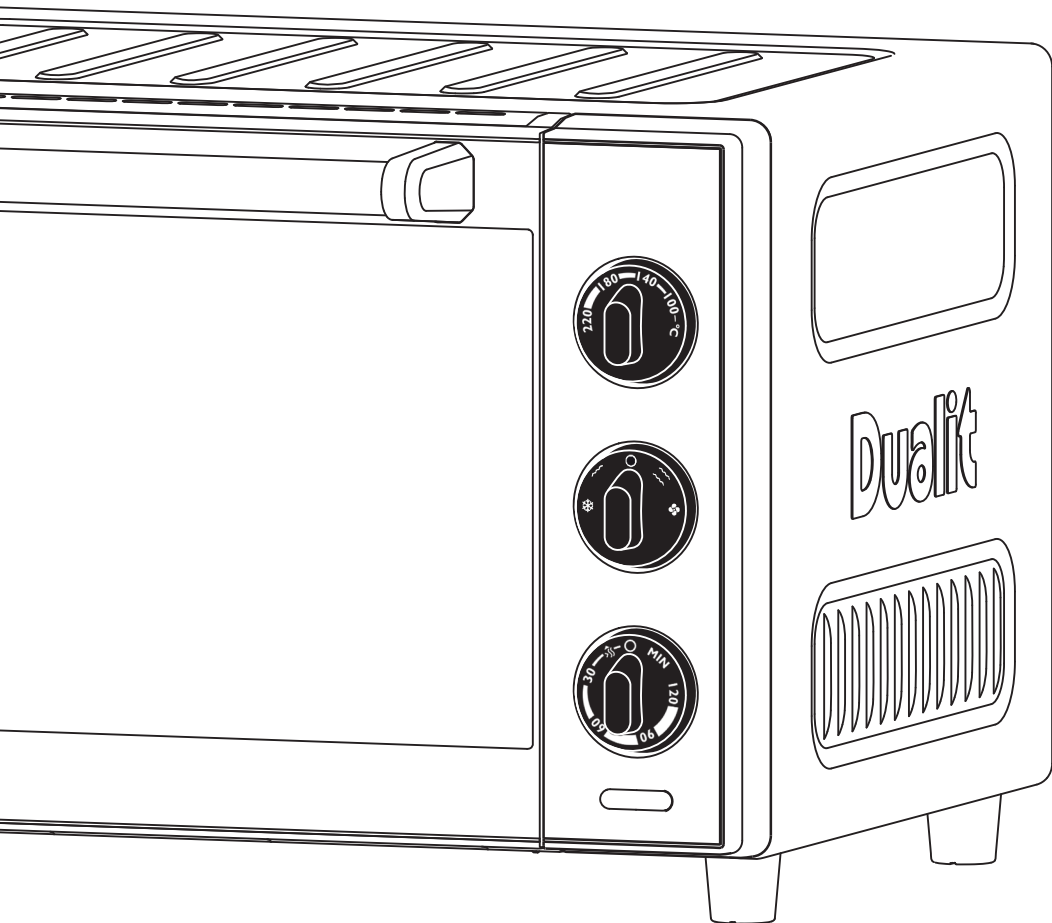

DON'T FORGET
TO REGISTER
YOUR PRODUCT

WWW.DUALIT.COM/REGISTER

OR BY POST



Register ✓
my appliance

RECIPE IDEAS

To access a comprehensive database of recipes, giving you lots of ideas for everyday meals and entertaining visit: www.dualit.com/recipes



HONEY ROAST CHICKEN

When you are hungry, a tasty roast chicken with a butter, honey, salt and cracked peppercorn crust is hard to beat. A good quality chicken is essential for a juicy and flavoursome result. A plump, free range, corn fed chicken is recommended. The result will be meltingly tender.

- **2 cloves garlic, finely sliced**
- **1 small bunch tarragon or thyme**
- **1.2kg (2¾ lb) chicken (not larger, or it will not cook in time)**
- **30ml (2 tbsp) runny honey**
- **25g (1oz) unsalted butter, softened to a dripping consistency**
- **1 tbsp sea salt crystals**
- **1 tbsp coarsely crushed black peppercorns**

METHOD

- Preheat oven to 220°C/425°F, set to Bake.
- Place the garlic and herbs in the chicken's cavity. Warm the honey and butter and using your hands, smear it over the bird thoroughly. With fingers still sticky, rub in the salt and pepper.
- Line the Grilling Pan with a silicone mat to prevent any honey drips burning onto the bottom. Put the Rack in the Grilling Pan and place the chicken on the top, breasts towards the door.
- Cook chicken at 220°C/425°F for 10 minutes on Wire Shelf position C, then turn the oven down to 190°C/375°F and allow 45 minutes per kg, plus 20 minutes. Make sure it is cooked through (to do this insert a skewer into the thickest part of the leg: if the juices run clear, the chicken is cooked).

CONTENTS

Safety precautions _____	04
Know your Mini Oven _____	06
Cooking functions _____	08
Setting up _____	10
Using your Mini Oven _____	11
Cleaning & maintenance _____	12
Replacing the Bulb _____	13
Troubleshooting _____	14
Guarantee _____	15

DON'T FORGET TO REGISTER YOUR PRODUCT	WWW.DUALIT.COM/REGISTER	Register ✓ my appliance
	OR BY POST 	

Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied remove any tags from the appliance body and recycle the packaging appropriately. Do not remove tags from the cord. You may wish to keep the box to store your appliance.

All illustrations are for representation only; your model may vary from illustrations shown.



IMPORTANT SAFETY PRECAUTIONS



READ ALL INSTRUCTIONS

BEFORE USING THE APPLIANCE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS

- **THIS IS AN ATTENDED APPLIANCE. Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating or plugged in).**
- This appliance must not be used by children younger than 8 years old and persons with very extensive and complex disabilities.
- Children aged 8-14 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge shall not use this appliance, unless they are supervised and have been given instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- This appliance is intended for indoor household use only. If the appliance is used improperly or for semi-professional purposes or if it is not used according to these instructions, the guarantee becomes invalid. Dualit refuses any liability for damaged caused.

Electrical Safety

- Before plugging in, check that the voltage marked on the appliance corresponds with the supply voltage. **Risk of electric shock and fire.**
- We recommend that the appliance is plugged into

a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker or blow a fuse. Preferably the socket outlet should be protected by a Residual Current Device (RCD).

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- **Should any of the lights remain illuminated after using the appliance, immediately unplug the appliance and call the service centre. Risk of fire.**
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- To be protected against electrical hazards, fire and injury to persons, do not immerse the mains lead, plug or appliance in water or any other liquid. **Risk of electric shock.**
- Note: Any plug cut from power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket outlet is hazardous.
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged, cracked or dropped in any manner. **Risk of fire, electric shock or injury.**
- In order to avoid a hazard, if the power cord is damaged it must, for safety reasons, be replaced by Dualit or by a qualified Electrical Engineer. Call Dualit's Customer Helpline on +44 (0) 1293 652 500.
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original.
- Replacement fuses should be ASTA approved to BS 1362.
- **Warning - This appliance must be earthed.**
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock. Do not use abrasive cleaners on the appliance body.
- To disconnect, turn the timer dial to the OFF

position to turn off the oven, turn the selector dial to the OFF position, then remove plug from wall outlet.

General Safety

- Do not place on or near a hot gas or electric burner, or in a heated oven. **Risk of fire.**
- Crumb tray must be in place.
- Empty and clean the crumb tray on a regular basis. A build up of crumbs, food or oil can burn or cause fire. Pull out the crumb tray and wipe clean using a damp cloth.
- Do not cover crumb tray or any part of the appliance with metal foil, this will cause overheating of the appliance.
- Do not allow cable to touch hot surfaces, or to hang over edge of a table or counter top. **Risk of fire or electric shock.**
- Do not use appliance for any purpose other than the intended use.
- Do not store or use your appliance in an appliance garage or under cupboards. **Risk of fire.**
- Do not use if dropped, cracked or damaged.
- The use of accessory attachments not recommended by Dualit will result in **fire, electric shock or injury.**
- Do not attempt to dislodge food when the appliance is plugged into electrical outlet. **Risk of electric shock.**
- Oversized foods, metal foil packages and utensils must not be inserted in the appliance. **Risk of fire, electric shock.**
- Do not insert anything into the ventilation slots and do not obstruct them.
- Extreme caution should be exercised when using containers constructed of materials other than metal or oven proof glass in the appliance.
- Do not place any of the following materials in the appliance: paper, cardboard, plastic and similar products. **Risk of fire.**
- A fire may occur if the appliance is covered or

touching flammable materials such as curtains, drapes and walls, when in operation. **Never attempt to open the appliance door if the appliance should catch fire.**

- The appliance must only be used in an upright position, never lying down, tilted or upside down.
- Use oven gloves to remove any object stored on top of the appliance.
- Use recommended temperature settings for baking and roasting.
- Do not rest cooking utensils or baking dishes on glass door.
- Do not store materials other than manufacturer's recommended accessories in this appliance when not in use. **Risk of fire.**
- Always leave the door ajar when grilling. **Risk of fire.**

SAVE THESE INSTRUCTIONS

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.



Accessible surfaces of the toaster may get hot during use. Therefore use handles or knobs.

INSTRUCTIONS ON ENVIRONMENT PROTECTION



Do not dispose of this product in the usual household garbage at the end of its life cycle. Please hand it over to a collection point for the recycling of

electrical and electronic appliances. The symbol on the product, the instruction of use or the packaging will inform you about the methods of disposal. The materials are recyclable as mentioned on its marking. By recycling, material recycling or other forms of re-utilization of old appliances you are making an important contribution to protect our environment. Please enquire about the community administration for the authorised disposal location.


KNOW YOUR MINI OVEN

DOOR HANDLE

DOUBLE GLAZED
GLASS DOOR

PLATE WARMING AREA

 TEMPERATURE DIAL

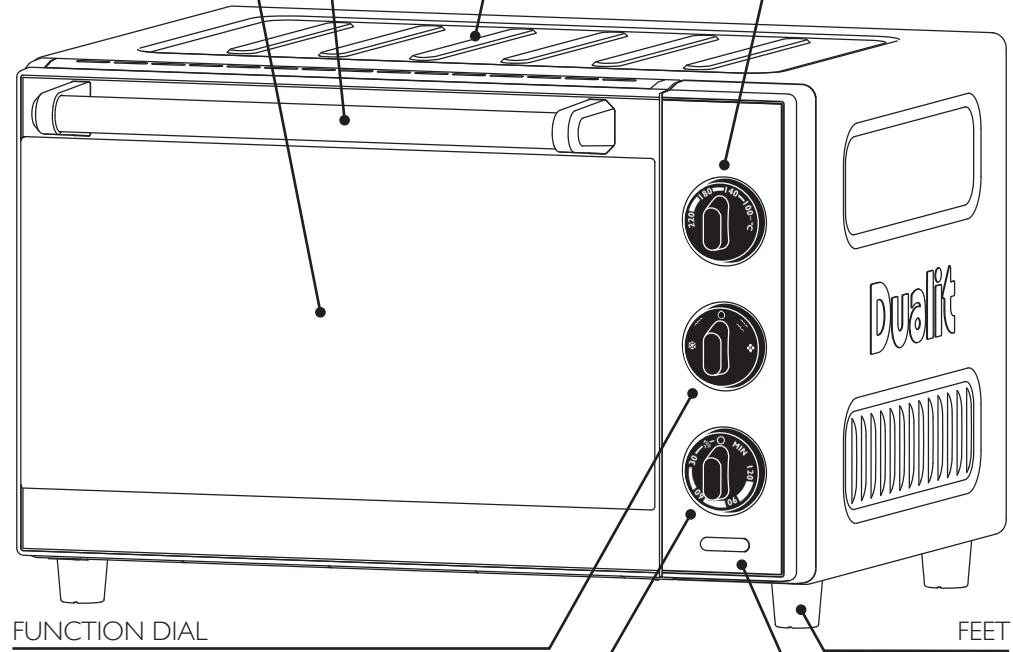

FUNCTION DIAL

For Bake, Defrost, Grill
or Convection

TIMER

0-120 min &
Pre-heat Indicator



FEET

 
 
 
TIMER LIGHT
Illuminates Red

ACCESSORIES


GRILLING PAN & RACK

WIRE SHELF


PIZZA TRAY



HOT AIR EXHAUST

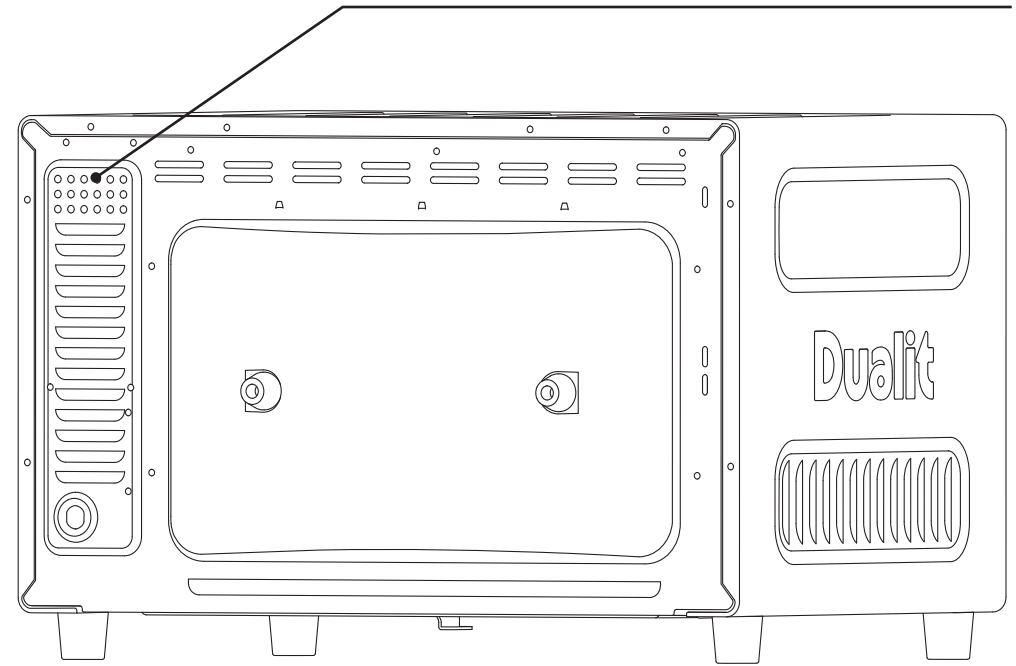 

LIGHT BULB

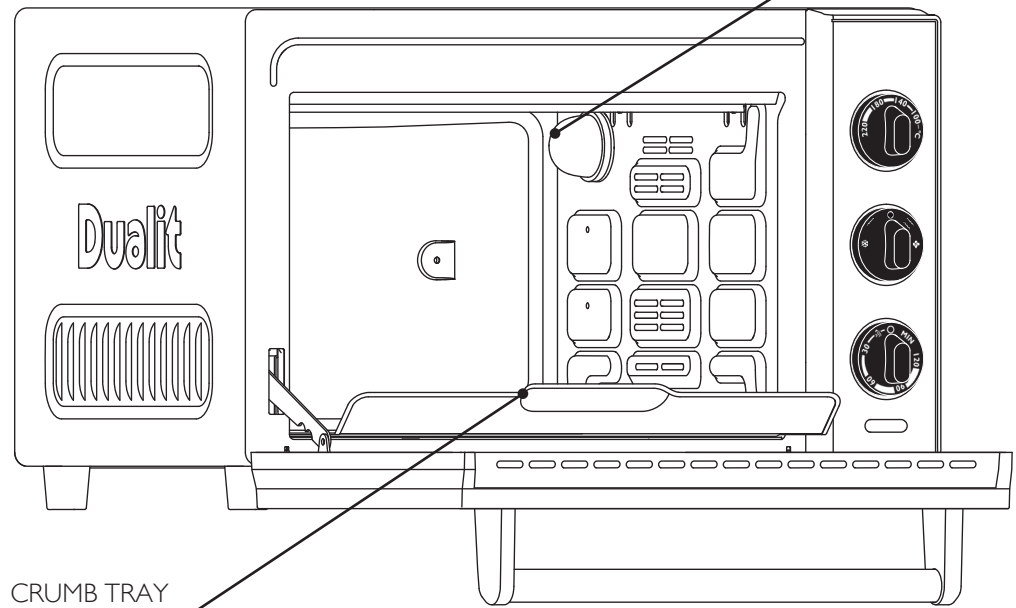 

CRUMB TRAY

COOKING FUNCTIONS

THESE TABLES ARE ONLY TO BE USED AS A GUIDE, COOKING TIMES MAY VARY. FOLLOW COOKING INSTRUCTIONS AS PER FOOD PACKAGING.



 
 
DEFROST

Only the fan activates to speed up the defrosting time. Food is thawed gently and evenly without cooking.

WIRE SHELF POSITION

Use the guide below to select the correct rack position.

The Wire Shelves can be inserted in both orientations for optimal grilling. Always ensure there is at least 30mm between element and items being grilled. **Risk of fire.**

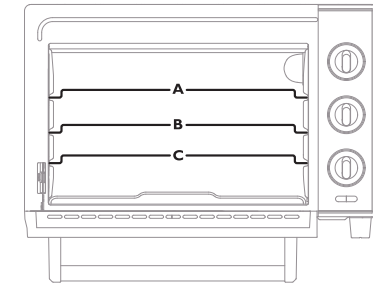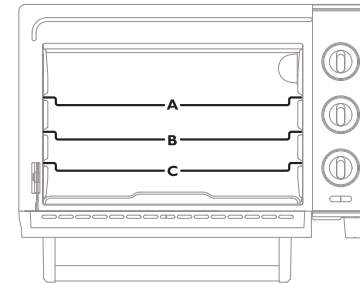


GRILL

Only top elements are used - a healthier way to cook meat products. Grill is also used for toasting and top browning. **Always leave door ajar when grilling.**

*Temperature Dial has no effect on grill temperature. Elements only turn off if oven overheats. If elements turn off when door is ajar, leave door open fully.
**Use Wire Shelf on shelf position A when toasting. Turn bread over halfway through.


FOOD	TEMP (°C)*	WIRE SHELF
Toast	N/A	A**
Bacon	N/A	A
Chicken Breast	N/A	B
Fish	N/A	B

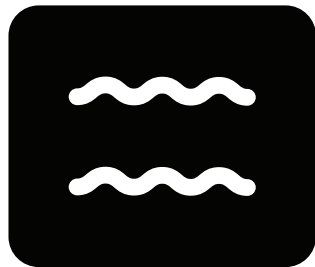 

BAKE

The baking function is used for any food product you would put in your large kitchen oven, such as roasting meats, chicken, baking cakes, cookies and more.

FOOD	TEMP (°C)	WIRE SHELF
Bread	190	C
Chicken Breast	220	C
Cookies	175	B
Thin Crust Pizza (Fresh)	220	C

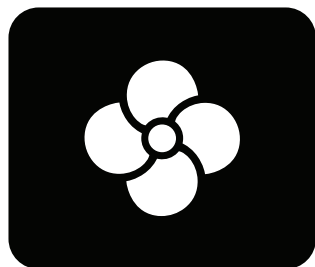 

CONVECTION

Convection baking uses an internal fan to circulate heated air around the food. This function produces fast, even cooking results.

Please note the convection function will operate at a slightly cooler temperature than the bake function. Add a few degrees to compensate for this. Some foods may not be ideal for convection cooking.


FOOD	TEMP (°C)	WIRE SHELF
Deep Pan Pizza (Frozen)	220	B
Sponge Cake	180	C
Jacket Potato	220	C
Brownies	175	C

SETTING UP


TURN THE OVEN ON FOR THE FIRST TIME IN A WELL VENTILATED ROOM. A "NEW" SMELL MAY BE GIVEN OFF, THIS WILL DISSIPATE AFTER A FEW USES.



 
Register your product at Dualit.com, this will only take 60 seconds. You will need the product model and serial numbers that are on the rating label on the base of the product.

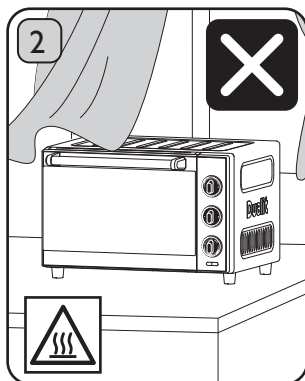

 
Do not store or use your oven in an appliance garage or under cupboards. Caution: Your oven has a Hot Air Exhaust at the rear. Do not block or obstruct. Risk of fire. Do not touch Hot Air Exhaust. Risk of scalding.

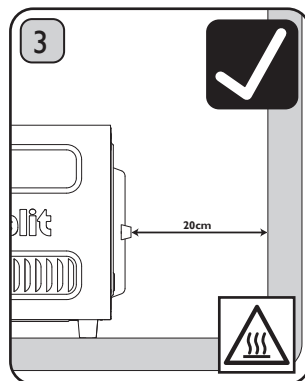

 
Place the oven on an open, level surface. Ensure there is a 20cm gap between the back of the oven and the wall. **Never place below or against a flammable surface. Never block or obstruct the Hot Air Exhaust. Risk of injury.**

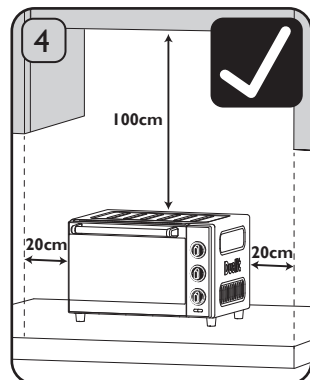

 Ensure the oven is positioned at least 100cm clear from any overhanging cupboards and 20cm clear from walls or nearby cupboards on all sides. **Risk of fire.**

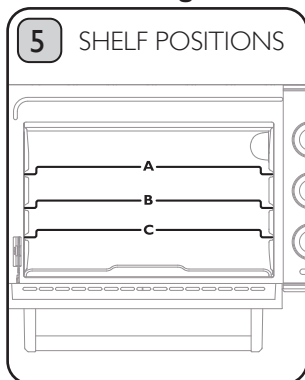

 
The Wire Shelf can be positioned at 3 different heights. The ideal position will be affected by the food item, temperature and setting (refer to page 9 for a guide on cooking shelf positions).

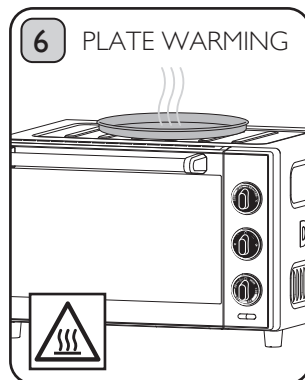


When in use, place plates on top of the oven to warm. The exterior walls get very hot when in use. **Use oven gloves to remove any plates on top of the oven. Risk of injury.**

USING YOUR MINI OVEN

 
AVOID CONTACT WITH THE HOT AIR EXHAUST AND ENSURE IT IS 20CM FROM ANY WALLS OR NEARBY CUPBOARDS. CAUTION: RISK OF INJURY OR FIRE.

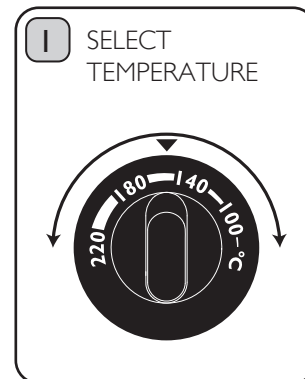

 
Turn the Temperature Dial to select the required temperature.

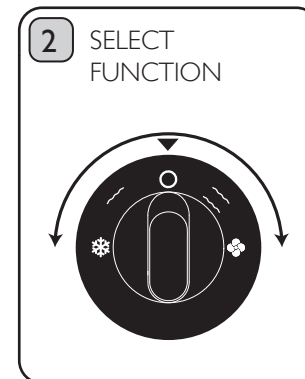

 Turn the Function Dial to select Grill, Defrost, Bake or convection.

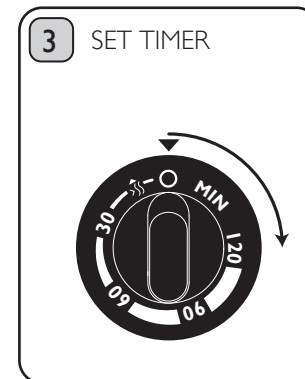

 
The Timer is the main ON/OFF switch. Turn the dial to the required amount of time. The red light will illuminate when the Timer is running.

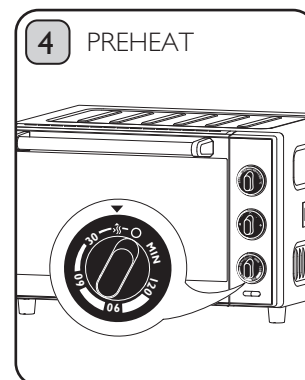

Ensure the oven door is closed. Turn the Timer to the Pre-Heat Indicator. When the Timer reaches '0' the bell will ring and the oven will turn off. The oven is now ready for cooking.



 Follow cooking instructions on food packaging or recipe, always check the food is cooked properly. Turn the Timer to the time setting required. When the Timer reaches '0' the bell will ring and the oven will turn off. Check food is cooked through before consuming.

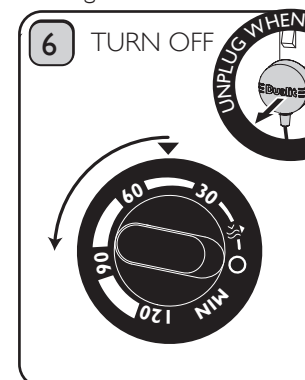


If you need to turn the oven off before the Timer has finished, set the Function Dial to '0' and turn the Timer to '0'. You will hear the bell. **Unplug when not in use. Risk of fire.**

Note: Empty and clean the Crumb Tray on a regular basis. A build up of crumbs, food or oil can burn or cause a fire. Pull out the Crumb Tray and wipe clean using a damp cloth after each use.

CLEANING & MAINTENANCE

 
BEFORE CLEANING MAKE SURE THE APPLIANCE IS SWITCHED OFF, UNPLUGGED AND ALLOWED TO COOL. DO NOT SUBMERGE THE BODY, POWER CORD OR PLUG INTO WATER OR OTHER LIQUID, OR POSITION UNDER A WATER TAP.*

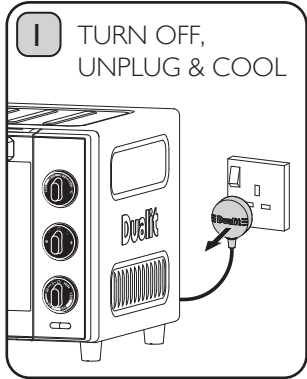


Always switch off, unplug and allow to cool before cleaning. Never use harsh abrasives or corrosive products. These could damage the oven surface.



 
Wipe the exterior with a damp cloth. Dry immediately. **Do not immerse in water. Risk of electric shock.**

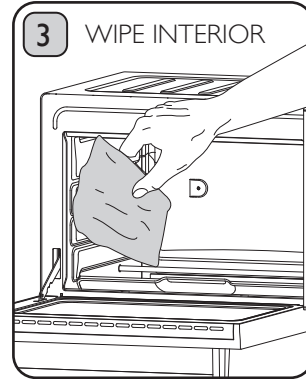

 Wipe the interior walls with a damp cloth and a mild liquid soap solution on a sponge. Dry immediately.

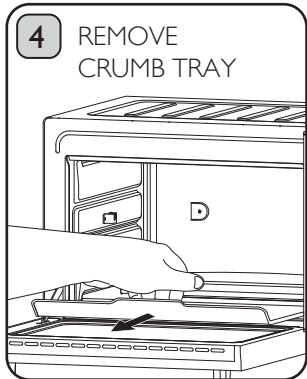

 Crumbs, food and oil will accumulate in the Crumb Tray and could catch fire if the tray is not emptied and cleaned frequently. Slide out the Crumb Tray and discard crumbs. Wipe clean and replace.

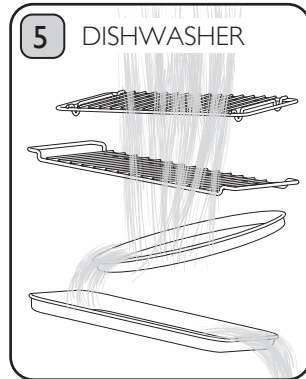


All attachments excluding the main body are suitable for dishwasher use. Use a wash cycle below 40°C. Remove prior to drying cycle.

***IT IS IMPORTANT TO CLEAN THE OVEN AND ALL PARTS AFTER EACH USE. THIS WILL PROLONG THE LIFE OF YOUR APPLIANCE.**

 
All other servicing or maintenance of the product must be performed by Dualit or a qualified electrical engineer.

REPLACING THE OVEN LIGHTBULB


BEFORE STARTING ANY MAINTENANCE INVOLVING ELECTRICAL PARTS OF THE APPLIANCE, IT MUST BE DISCONNECTED FROM THE POWER SUPPLY. RISK OF ELECTRIC SHOCK.

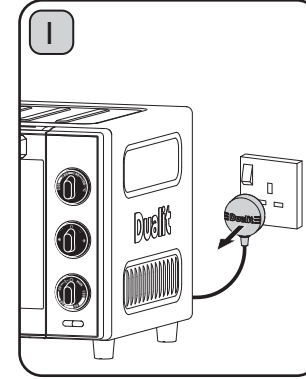

 
Switch off the electrical supply and unplug the appliance.

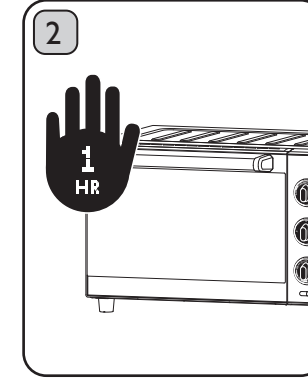

 
Let the oven cavity, heating elements and protective glass cover cool down for at least an hour after use then remove the wire shelf. **Caution: Risk of burns.**

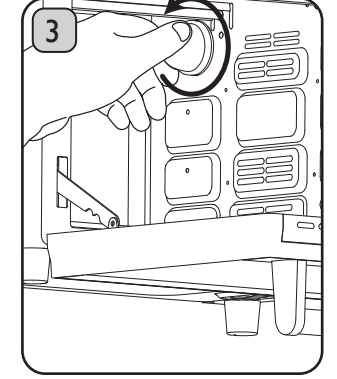

 Unscrew the protective glass cover anticlockwise.

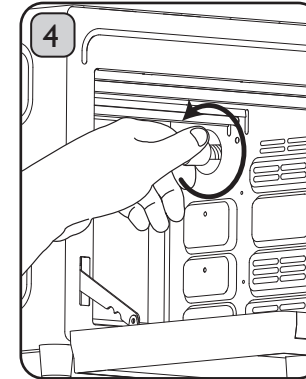

 Unscrew anticlockwise and replace the Lightbulb with a new bulb suitable for high temperatures (230°C) having the following specifications: type E14, 240V, 25 watt.

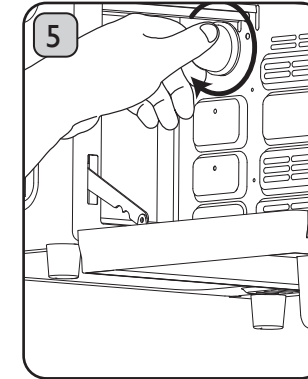

Refit the protective cover. **Note: Oven bulb replacement is not covered by your guarantee.**

TROUBLESHOOTING



POSSIBLE CAUSE(S)	SOLUTION(S)
MY MINI OVEN DOES NOT TURN ON	
1. The Mini Oven may not be properly connected to the power supply.	1. Check the plug is in the socket.
2. The mini oven plug fuse may have failed.	2. Replace the plug fuse if necessary and check your residual current device (rcd). Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original. Replacement fuses are available and should be ASTA approved to BS1362.
3. The Mini Oven works but the Timer Light does not illuminate.	3. The LED Light Bulb may have blown and cannot be replaced. Call Customer Services on 01293 652500 for further information.
MY FOOD IS NOT COOKING	
1. The Function Dial may be set incorrectly.	1. Check that the Function Dial is set to the correct type of food that you are cooking.
2. The preheat temperature may not have been reached.	2. Ensure that you wait for the Timer to reach '0' and hear the bell ring.
3. The temperature is not right for the food you are cooking.	3. Either increase the temperature using the Temperature Dial, or increase the time by using the Timer.
4. The power is not working/the oven will not turn on.	4. Double check that the oven is plugged in correctly, or check that the fuse in the plug has not blown.
MY FOOD IS NOT HOT ENOUGH	
1. Your food may not have been in the oven for long enough.	1. Increase the time by using the Timer.
2. The temperature is not right for the food you are cooking.	2. Either increase the temperature using the Temperature Dial, or increase the time by using the Timer.
3. The preheat temperature may not have been reached.	3. Turn the Timer to the Pre-Heat Indicator. When the Timer reaches '0' the bell will ring and the oven will turn off. The oven is now ready for cooking.
MY OVEN SMELLS WHEN FIRST USED	
1. A 'new' smell may be given off the first time you use the oven.	1. The 'new' smell will dissipate after the first few uses. See the Setting Up section on page 10 for more information.
MY OVEN LIGHT DOES NOT WORK	
1. The light bulb has blown.	1. Replace the E14 type bulb (240V, maximum 25W). Refer to maintenance section for detailed instructions.

GUARANTEE

This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.

This Guarantee covers both parts and labour. Carriage is not included.

Your Guarantee period is as follows:

- 1 year

This Guarantee provides benefits which are additional to, and do not affect, your statutory rights. This Guarantee does not cover the cost of returning the product to the dealer from whom it was purchased or to ourselves. This Guarantee applies only to products sold and located in mainland Great Britain. It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to:

- Failure to use or maintain product in accordance with Dualit's instructions.
 - The product being connected to an unsuitable electricity supply.
 - Accidental damage to or abuse or misuse of the product.
 - Product modification, except by Dualit or approved agent.
 - Dismantling of or interference with the product.
 - Theft or attempted theft of the product.
- Before returning any product under this Guarantee, please check that:
- You have followed the product instructions correctly.
 - Your mains electricity supply is functional.
 - The defect is not due to a blown fuse.

If you wish to claim under this guarantee you should:

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct.
- Ensure that the product is clean and packed carefully (preferably in its original carton).
- Enclose details of your name, address and telephone number and when and where the product was purchased, together with proof of purchase (e.g. a till receipt).
- Give exact details of the nature of the defect.

This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee.

For further advice contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday).

Alternatively, email Dualit at info@dualit.com or visit www.dualit.com

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in to an official collection point for recycling. By doing this you help preserve the environment.

DON'T FORGET TO REGISTER YOUR PRODUCT

Take a minute to register your product with us to receive these outstanding benefits:

1 Fast and efficient customer service important safety advice, access to manuals and product information should you require assistance with your purchase.

2 A library of mouth-watering recipes and regular articles and blogs.

3 Be the first to hear about exciting new Dualit products.

Register ✓
my appliance

Dualit recommends safety first: please register your product so that we can contact you in the unlikely event that a safety notification is issued. Remember to keep your receipt as proof of purchase.

WWW.DUALIT.COM/REGISTER



Dualit Limited County Oak Way Crawley West Sussex RH11 7ST
+44(0)1293 652 500 info@dualit.com www.dualit.com