

Boil-dry device

- Do not switch the kettle on unless it contains at least one cup of water. Misuse of this kind will shorten the life of the kettle
- If the kettle is accidentally switched on when it does not contain sufficient water, a boil-dry device will automatically switch it off.
- Wait until the kettle has cooled down before refilling. The lid may be hot and the water may spit as it touches the kettle base.

4 CARE AND CLEANING

- Switch the kettle off, lift it from the power base, unplug the power base from the wall socket and let the kettle cool down completely before cleaning. Wipe the outside and inside surfaces of the kettle with a damp cloth
- If necessary, you may use a mild household detergent. To clean the filter, see 'water filter' section below
- If you use detergent inside the kettle, rinse thoroughly afterwards to remove all traces
- Ensure that all connectors and sockets are kept dry
- Do not immerse the kettle or power base in water or any other liquid
- Do not use harsh or abrasive cleaners or solvents

Descaling

Scale build-up will cause the element to overheat, reducing its working life. It may also cause the safety cut-out to operate prematurely, switching the kettle off before the water actually boils.

As the kettle uses an under-floor type element, lime scale can only build up on the walls and floor of the kettle. This is readily seen and should be dealt with promptly.

Minimising scale build-up

- Empty the kettle after each use; do not allow water to stand in the kettle overnight
- Use filtered water instead of tap water
- Descale the kettle regularly, at least once a month, using a proprietary brand of descaler. In areas of very hard water descaling may be necessary more often
- When descaling has finished, empty the kettle and rinse it out numerous times with fresh water, then refill with fresh water, boil, then discard boiled water

Water filter

Depending upon the hardness of the water, the scale particles that remain suspended in the water may give a cloudy appearance.

The filter fitted to the kettle will prevent these particles passing into your drink.

You therefore must ensure that the filter is kept clean and clear of deposits, otherwise the kettle's performance may be affected, your drinks may contain scale and the water inside the kettle may look cloudy.

Clean the filter whenever there are any obvious deposits left on the mesh and especially if pouring is affected

- Make sure hands are clean and free from hand cream, soap or similar, which might leave a slight taint to the water
- Remove the kettle from the power base and ensure kettle is cold
- Open the lid. Hold the top of the filter and pull it gently up and out of the kettle. Rinse it under a tap while carefully brushing it with a soft brush. Rinse the kettle out with fresh water
- To replace, align the sides of the filter with the grooves in the filter holder, and slide it slowly downwards and back into place.

5 AFTER SALES SERVICE

If the kettle is not working correctly, check that:

- You have followed the instructions correctly
- The plug fuse has not blown
- The mains supply/fuse/circuit breaker has not blown/tripped

If the powercord is damaged it must be replaced by a special cord set

available from Dualit or an authorised Dualit service agent. This part should only be refitted by a competent electrician.

6 GUARANTEE

If your kettle fails within one year from date of purchase we will repair or replace it free of charge, provided:

- It has not been misused, neglected or damaged
- It has not been modified
- A receipt is supplied showing date and place of purchase

This guarantee does not affect your statutory rights.

For all enquiries, contact the Dualit Helpline on **+44 (0)1293 652 500** (09:00 to 17:00 Monday to Friday). In USA call: **973 623 9370**.

Alternatively email your enquiry to **info@dualit.com**.

Dualit  CE Compliant to 89/336/EEC (EMC directive) and 73/23 & 93/68/EEC (LV directive)

DUALIT LIMITED COUNTY OAK WAY CRAWLEY WEST SUSSEX RH11 7ST
TELEPHONE: +44 (0) 1293 652 500 FACSIMILE: +44 (0) 1293 652 555
EMAIL: info@dualit.com WEB: www.dualit.com

Dualit®



GUARANTEE AND
INSTRUCTIONS
FOR DUALIT
JUG KETTLE

1

Safeguards

2

Before use

3

How to use

4

Care and cleaning

5

After sales service

6

Guarantee

Please read these instructions before using your kettle. Keep them in a safe place for future reference. Carefully remove all packaging before use but keep the packaging until you are satisfied that the kettle is working correctly.

1 IMPORTANT SAFEGUARDS

When using any electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

- To be protected against electrical hazards, do not immerse the mains lead, plug, power base or kettle in water or any other liquid
- Do not use in bathroom or outdoors
- Use handles or knobs – do not touch hot surfaces
- Scalding may occur if the lid is removed during the brewing cycle
- Take care when pouring – pour slowly and do not over-tilt the kettle
- Water will remain hot for a considerable time after boiling and can present a scald hazard. Keep the kettle, power base and the mains lead away from the edge of worktops and out of the reach of children
- Do not leave appliance unattended when in use
- Do not operate the kettle on an inclined plane
- Do not move the kettle while it is switched on

- Remove the kettle from its power base before filling or pouring
- **CAUTION: to prevent damage to the appliance, do not use alkaline cleaning agents. When cleaning, use a soft cloth and a mild detergent**
- This appliance is not intended for use by young children or infirm persons unless they are supervised
- Unplug the power base from the wall socket when not in use, or before moving and cleaning
- Allow the kettle to cool down completely before cleaning and storing
- Ensure that the lid is fully closed before switching the kettle on, otherwise it may not properly switch off
- Ensure that the kettle is correctly positioned on the power base before switching on
- Do not fill above the bottom of the ‘max’ mark on the water level indicator
- Do not place the kettle, power base or mains lead on or near any hot surface, hot hob or gas burner
- Do not use the kettle for any purpose other than heating water
- Do not operate the kettle unless it contains at least 150ml of water and the floor of the kettle is covered
- This kettle is for household use only
- To disconnect, turn any control to off, then remove plug from wall outlet.
- Use the kettle only with the power base supplied and vice versa

- The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons.
- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- Longer extension cords are available and may be used if care is exercised in their use.
- If a long extension cord is used,
 1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance,
 2. The appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and
 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged in any manner. If the mains lead is damaged, it must be replaced by a special cord set available from Dualit’s Customer Helpline on +44 (0)1293 652 500.

SAVE THESE INSTRUCTIONS

2 BEFORE USE

Remove all packaging from the kettle and its power base. Before using the kettle for the first time, or if it has been out of use for a long time, fill to the ‘max’ mark and boil, then discard the boiled water and rinse the kettle out with fresh cold water.

Connecting to the mains supply

- Check that the voltage marked on the appliance corresponds with the supply voltage
- **NOTE: any plug cut from the power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous**
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original. Replacement fuses are available from Dualit and should be ASTA approved to BS 1362

3 HOW TO USE

Position the power base as close to a wall socket as possible. Locate the mains cable so that it does not overhang the work surface, and cannot be caught accidentally. Shorten the mains lead by winding it around the cord storage area under the power base, and bring it out of the cord exit in the base.

Opening the lid

- Remove the kettle from the power base. If the switch has been pushed

down inadvertently, it will spring up into the ‘off’ position

- Hold the handle of the kettle firmly with one hand, hold the knob on the lid with the other, pull the knob up and towards the handle to open

Filling

- Open the lid and fill the kettle through the lid opening, not through the spout
- Observe the water level when filling. Use at least one cup of water, but the water level must stay below the ‘max’ mark

Boil only what you require

- Do not overfill the kettle – there is a risk that boiling water may be ejected from the spout and lid
- Close the lid and check it is firmly in place, otherwise the kettle may not switch off when boiling

Switching on

- Check that the switch is in the ‘off’ position (lift the kettle from the power base and set it down again, taking care not to spill any water). The switch will only operate when the kettle is correctly fitted onto the base
- Plug the power base into the wall socket. If necessary, switch on the wall socket
- Press the switch down. The neon light will go on and the kettle will start to heat up

- When the water has boiled, the kettle will automatically switch off, the switch will return to the ‘off’ position and the neon light will go out.

NOTE: when you lift the kettle from the base, you will see drops of moisture on the surface of the power base. This is the steam used to switch the kettle off automatically, which then condenses and escapes through vents in the underside of the kettle.

This is perfectly normal, and should not be cause for alarm or returning the kettle.

Pouring

- Remove the kettle from the power base before pouring
- When filling or carrying the kettle, do not tilt it backwards, as this may allow water to pass through the steam tube onto the control area. Should this happen, the kettle must be allowed to dry before re-use
- To avoid the risk of splashing, once the kettle has boiled wait 10 seconds then pour **slowly**. Do not over-tilt the kettle

WARNING: IF THE KETTLE HAS JUST BOILED, IT WILL BE FULL OF STEAM, WHICH WILL ESCAPE AS SOON AS THE LID IS OPENED.