

Lite Kettle


Dualit®

Since 1945




If you are finding your Kettle is not switching off automatically, unplug and leave for 24 hours to dry fully before using again. To avoid this see below advice:


WARNING

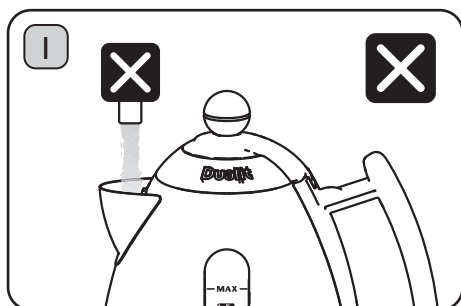

Do not fill the Kettle via the Spout.

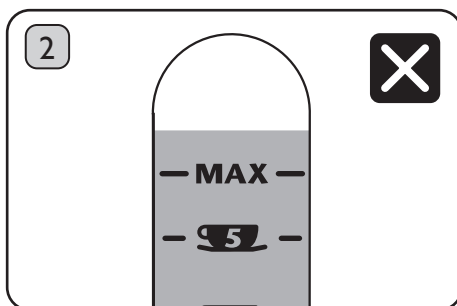

Do not fill above the bottom of the Max Mark Indicator on the Viewing Window.

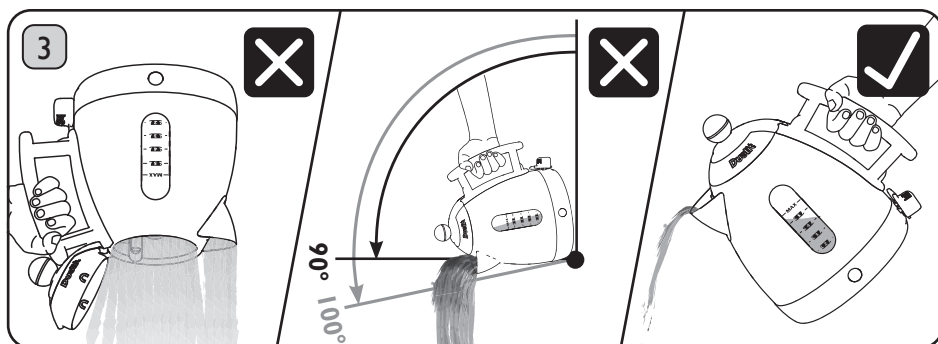

Do not fully invert the Kettle.

Do not pour past 90°.

Only empty the Kettle through the Spout.

Failure to follow these instructions may cause your Kettle to stop switching off automatically. This is because water has gone down the Steam Tube on to the control area.