Kilrock Espresso & Coffee Machine Descaler Instruction Manual For Café Plus (CPD3)

IMPORTANT NOTICE: PRODUCT FAILURE DUE TO THE BUILD UP OF LIMESCALE IS NOT COVERED BY GUARANTEE. Dualit recommends descaling at least once a month, in a well-ventilated area, to prevent limescale build up in the machine. The descale cycle will take approximately 45 minutes to complete. To prolong the life of your Coffee Machine and ensure it continues to produce consistent quality coffee, Dualit recommends the use of an OSCAR Bag water softener. For more information, visit our website www.dualit.com/accessories or contact our Customer Services on 01293 652500 option 1.

1	2 Dualit	3	4 Dualit
With Coffee Machine turned off; remove Water Tank and pour in the full 150ml bottle of Kilrock Espresso & Coffee Machine Descaler, followed by water to fill tank to MAX mark. Replace Water Tank on the machine.	Plug Coffee Machine in and switch on. Place a large mug on the Drip Tray under the Nozzle.	TIP: Lift and lower the Lever to ensure there is no capsule in the machine.	Enter the Descale Mode by pressing and holding the Coffee and Tea buttons for 5 seconds. Both buttons will now flash. Caution: Hot water.
5 Dualit	6	7	8 Dualit
Press the Coffee Button to dispense water and after approximately 1 minute 10 seconds, press again to stop and empty your mug. Caution: Be aware of splashes when dispensing hot water. May be harmful during descale. Wait 10 minutes for descaling to take effect then repeat twice, to reach the minimum water level in the Water Tank.	Rinse and refill the Water Tank with fresh water. Repeat step 5 twice, without the 10 minute break. Flushing through two full tanks of fresh water removes traces of the descaling solution. Caution: Hot water.	Place an OSCAR Bag into the Water Tank to soften your water and reduce limescale build-up. Never allow OSCAR Bag to come into contact with descale solution. For more information or to buy your OSCAR Bag visit: www.dualit.com/accessories	Refill the Water Tank with fresh water and replace back onto the machine. Press and hold the Coffee and Tea Buttons for 5 seconds to return to the usual function. If the Coffee Machine is turned off in Descale Mode, it will stay in this mode when switched back on. Descale is now complete. You are now ready to make a coffee or unplug the Coffee Machine and follow the Cleaning instructions in your manual.

ACTIVE INGREDIENTS: Contains amidosulphonic acid and corrosion inhibitor. See additional notes and instructions on main box. KILROCK PRODUCTS LTD. Unit 1b Alma Road Industrial Estate, Chesham, Bucks, HP5 3HB