


# UV Steriliser

Instruction Manual & Guarantee

# Dualit®

Since 1945

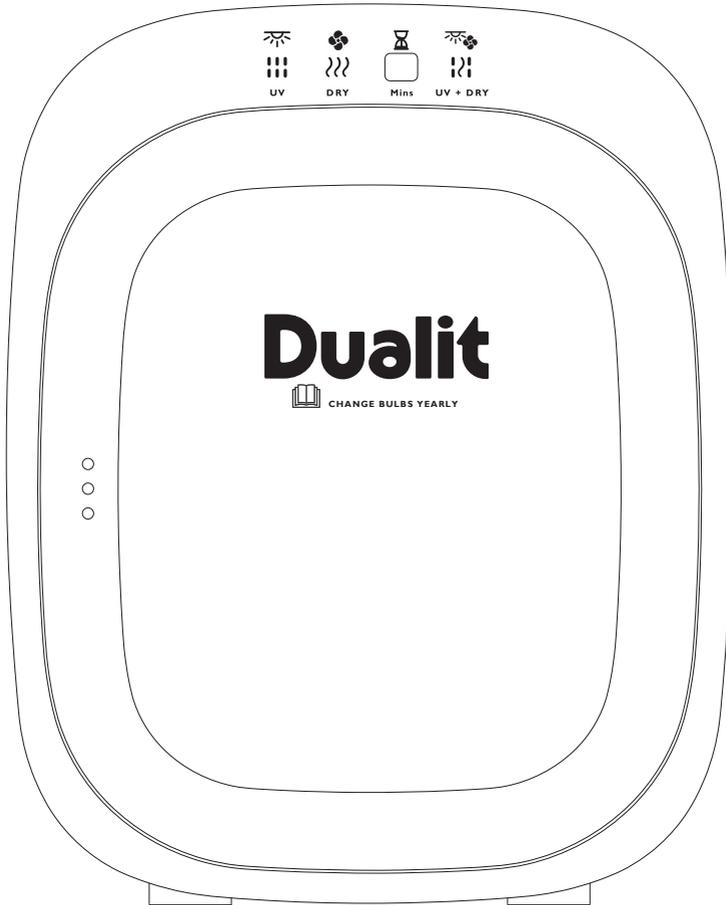

DON'T FORGET  
TO REGISTER  
YOUR PRODUCT

[WWW.DUALIT.COM/REGISTER](http://WWW.DUALIT.COM/REGISTER)

OR BY POST



Register ✓  
my appliance

# DUALIT UV STERILISER

Dualit's UV Steriliser offers powerful, chemical-free UV sterilising for your home. With no water or chemicals required, the UV Steriliser can be used to sterilise a range of items including make-up, nail and haircare tools, baby bottles, soothers and toys and household items such as cleaning cloths, keys, remote controls – even your mobile phone! The UV Steriliser kills 99.9% of harmful bacteria and viruses and features three functions to sterilise, dry and deodorise.

## REGISTER YOUR PRODUCT

- 1. Fast and efficient customer service** important safety advice, access to manuals and product information should you require assistance with your purchase.
- 2. A library of mouth-watering recipes** and regular articles and blogs.
- 3. Be the first to hear** about exciting new Dualit products.

**Dualit recommends safety first:** please register your product so that we can contact you in the unlikely event that a safety notification is issued. Remember to keep your receipt as proof of purchase.

DON'T FORGET  
TO REGISTER  
YOUR PRODUCT

[WWW.DUALIT.COM/REGISTER](http://WWW.DUALIT.COM/REGISTER)

OR BY POST



Register ✓  
my appliance

# CONTENTS

|                                |    |
|--------------------------------|----|
| Safety precautions _____       | 04 |
| Know your UV Steriliser _____  | 07 |
| Functions _____                | 08 |
| Setting Up _____               | 09 |
| Assembling _____               | 10 |
| Using your UV Steriliser _____ | 12 |
| Cleaning and Care _____        | 15 |
| Troubleshooting _____          | 17 |
| Guarantee _____                | 18 |

Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied remove any tags from the appliance body and recycle the packaging appropriately. Do not remove tags from the cord. You may wish to keep the box to store your appliance.

*All illustrations are for representation only; your model may vary from illustrations shown.*



## IMPORTANT SAFETY PRECAUTIONS



# READ ALL INSTRUCTIONS

BEFORE USING THE STERILISER KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

## IMPORTANT SAFEGUARDS

### • THIS IS AN ATTENDED APPLIANCE.

- Do not leave appliance unattended during use, unplug after each use (**risk of fire** if an unattended appliance is left operating or plugged in).
- This appliance must not be used by children younger than 8 years old and persons with very extensive and complex disabilities. Children aged 8-14 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge shall not use this appliance, unless they are supervised and have been given instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is intended for household use only. If the appliance is used improperly or for professional or semi-professional purposes or if it is not used according to these instructions the Guarantee becomes invalid and Dualit refuses any liability for damage caused.

### Electrical Safety:

#### Before Connecting to the Mains Supply

- Check that the voltage marked on the appliance corresponds with the supply voltage. **Risk of electric shock and fire.**
- We recommend that the appliance is plugged into a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker, or blow a fuse. Preferably the socket outlet should be protected by a residual current device (RCD).
- Unplug the appliance from the wall socket when not in use, or before moving and cleaning. **Risk of fire.**
- To be protected against electrical hazards, fire, and injury to persons, do not immerse the mains lead, plug or appliance in water or any other liquid. **Risk of electric shock.**
- NOTE: Any plug cut from the power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous. **Risk of electric shock and fire.**
- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original. Replacement fuses are available and should be ASTA approved to BS1362. **Risk of electric shock and fire.**
- Do not place heavy or hot items on the appliance or Power Cord or pull on the Power Cord. The Power Cord is removable if the Power Cord is damaged it must, for safety reasons, be replaced with a cord available from Dualit. Call Dualit's Customer Helpline on +44 (0)1293 652 500.
- Do not operate any appliance with a damaged lead or plug, if the Power Cord is loose in the Inlet, after the appliance malfunctions or has been damaged, cracked or dropped in any manner. **Risk of electric shock and fire.**
- Never fit the Power Cord if it is wet or dirty or using wet hands. Never submerge appliance or Power Cord and make sure Power Cord is kept clean. **Risk of fire or electric shock.**
- Firmly insert the Power Cord into the Inlet

located below the box on the rear of the Body. **Risk of fire if loose.**

- Ensure that the appliance is assembled with all components in place before plugging in. **Risk of injury.**
- Should the internal light remain illuminated after using the appliance, immediately unplug the appliance and call service centre. Call Dualit's Customer Helpline on +44 (0)1293 652 500.

### General Safety:

- Do not place the appliance or Power Cord on or near any hot surface, hot hob, gas burner or in a heated oven or hang over the edge of a table or countertop. **Risk of electric shock, fire or injury.**
- Do not store or use in an appliance garage or under cupboards. **Risk of fire.**
- Do not operate on an uneven surface. The appliance must only be operated on a flat, horizontal surface. **Risk of injury.**
- Do not use if dropped, cracked or damaged. **Risk of electric shock.**
- Do not use this appliance in a bathroom, outdoors or humid environments. **Risk of electric shock.**
- Never tamper with the safety systems. They are included for your personal safety.
- Do not attempt to open the Body or dismantle any parts from the appliance without permission from Dualit Ltd. For spares, call Dualit's Customer Helpline on +44 (0)1293 652 500.
- Do not move the appliance while it is switched on. When moving the appliance, use both hands and lift holding the Body upright. **Risk of injury or electric shock.**
- The use of accessory attachments is not recommended by Dualit and may result in fire, electric shock, or injury to persons.
- If appliance emits a burning smell while in use, stop the appliance immediately and unplug. Call Dualit's Customer Helpline on +44 (0)1293 652 500. **Risk of fire and electric shock.**
- Do not unplug appliance while in use. End cycle before unplugging the appliance. **Risk of appliance malfunctioning.**
- Do not open Door or remove items during the UV or UV & Dry cycles. **Risk of bacterial or viral contamination or injury.**
- Do not place items susceptible to heat damage into the appliance during the Dry or UV & Dry cycles. **Risk of fire.**
- Do not use flammable materials in the appliance. **Risk of fire.**
- To prevent damage to the appliance, do not use alkaline cleaning agents, benzene, thinner, or alcohol when cleaning. Use a soft cloth and a mild detergent. Do not use a scouring pad or abrasive cleaner on the appliance. **Risk of electric shock or fire.**
- To disconnect, end cycles then remove plug from wall outlet. **Risk of fire.**
- Product surface and appliance interior is subject to residual heat after use. **Risk of injury.**
- **WARNING:** UV radiation is dangerous for the eyes and skin. Do not operate the UV-C emitter outside the appliance.
- Do not use if glass in door is cracked/damaged or missing. **Risk of injury.**
- It is intended that replacement of the UV-C Purification Bulb can be carried out by the user, read the instructions before replacing the bulb. Call Dualit's Customer Helpline on +44 (0)1293 652 500. **Risk of electric shock and bacterial or viral contamination.**
- **WARNING:** UV-C Purification Bulbs must be replaced annually. Make a note of when you first used/replaced the Bulbs to ensure that you replace annually. Call Dualit's Customer Helpline on +44 (0)1293 652 500. **Risk of electric shock and bacterial or viral contamination.**
- Before replacing the UV-C Purification bulbs, unplug the appliance from the mains and allow to cool down completely before replacing the bulb. **Risk of electric shock.**



## IMPORTANT SAFETY PRECAUTIONS

- This appliance contains a UV-C Purification bulb, using this appliance in a way not detailed in the instructions, or using an appliance with damage to the housing may result in the escape of dangerous UV-C radiation. UV-C radiation may, even in little doses, cause harm to the eyes and skin. Appliances that are obviously damaged must not be operated. **Risk of injury.**

## SAVE THESE INSTRUCTIONS

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification.




Unpack the box with care, keeping all the packaging materials until you are satisfied everything is present and in working order. Once satisfied remove any tags from the appliance body and recycle the packaging appropriately. Do not remove tags from the cord. You may wish to keep the box to store your appliance.

## KNOW YOUR UV STERILISER

Your steriliser uses UV-C bulb technology to kill 99.9% of harmful bacteria. It also uses unique deodorising technology to produce negatively charged ions, which helps remove odours from any items being sterilised.

Suitable for many different products including glass, plastic, stainless steel, electronic devices, toys and dishcloths. Ensure you are using the correct Function for the item inside the UV Steriliser.

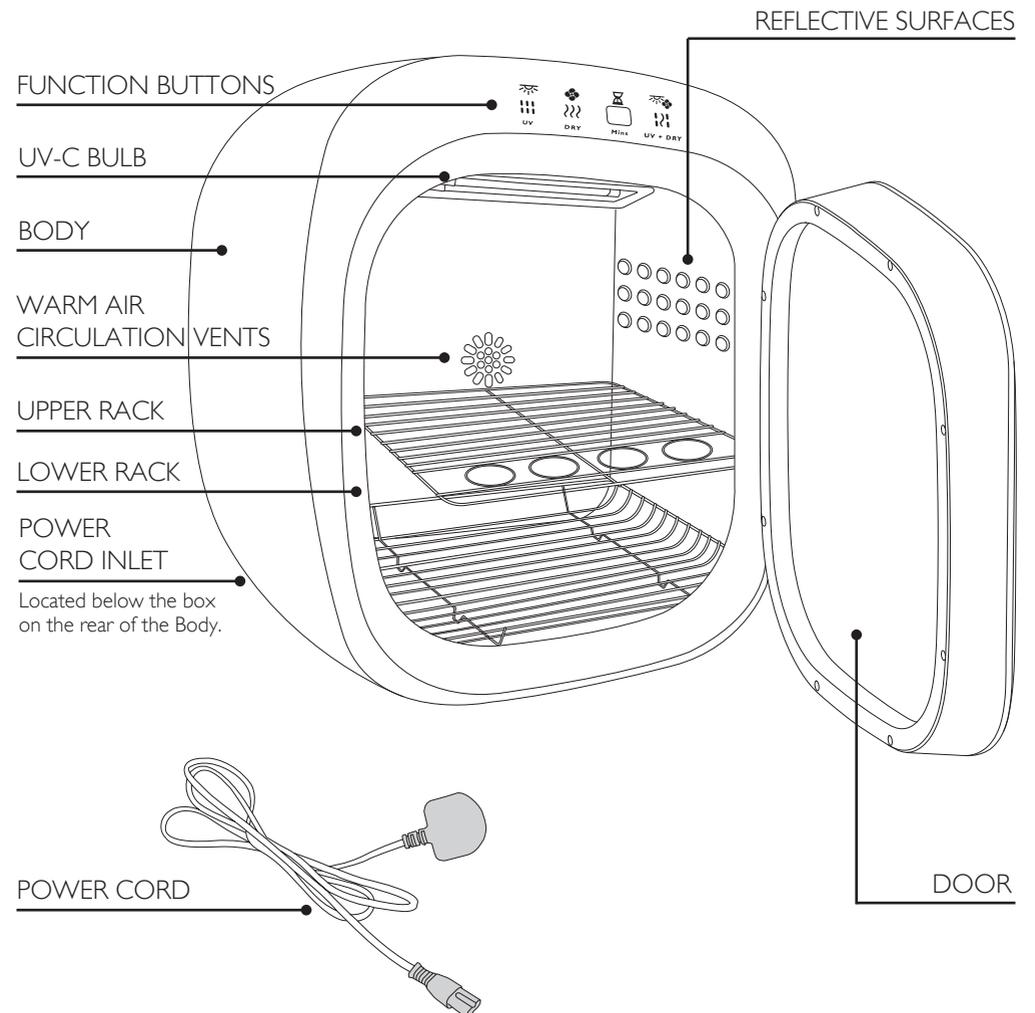

# FUNCTIONS

Your Dualit UV Steriliser is operated by touch icons on the operating panel.

| ICON | FUNCTION     | DESCRIPTION  |
|------|--------------|--|
|      | UV           | Sterilises with ultraviolet rays and deodorises to remove unwanted odours. Use the 15 minute cycle when one rack is full and 25 minute cycle when both racks are full.                       |
|      | Dry          | Dries items without sterilisation in either a 15 minute cycle when one rack is full or a 20 minute cycle when both racks are full. An additional cycle for 10 minutes deodorises items only. |
|      | Time Display | Indicates how long a cycle will take. Once the cycle has started, this will count down to zero in minutes. Automatically turns off with a beep to indicate the end of the cycle.             |
|      | UV and Dry   | Dries, sterilises and deodorises in one. Use the 35 minute cycle for items that dry fast, or the 55 minute cycle for items that need a longer time to dry.                                   |

## REGISTER YOUR PRODUCT

- 1. Fast and efficient customer service** important safety advice, access to manuals and product information should you require assistance with your purchase.
- 2. A library of mouth-watering recipes** and regular articles and blogs.
- 3. Be the first to hear** about exciting new Dualit products.

**Dualit recommends safety first:** please register your product so that we can contact you in the unlikely event that a safety notification is issued. Remember to keep your receipt as proof of purchase.

DON'T FORGET  
TO REGISTER  
YOUR PRODUCT

[WWW.DUALIT.COM/REGISTER](http://WWW.DUALIT.COM/REGISTER)

OR BY POST



Register my appliance

# SETTING UP


Read and follow these instructions before using your UV Steriliser. **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use (**risk of fire if an unattended appliance is left operating**).




Before first use, wash the Upper Rack and Lower Rack with warm soapy water and rinse thoroughly. Do not submerge the Body, Power Cord or Plug as there is a risk of electric shock and permanent damage to the appliance.



Register your product at Dualit.com, this will only take 60 seconds. You will need the product model and serial numbers that are on the rating label on the base of the product.

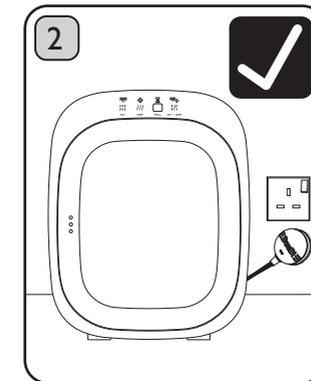


Position the UV Steriliser on a flat surface away from sources of heat. Place the UV Steriliser as close to the wall socket as possible. **Do not store or use the UV Steriliser in an appliance garage or under cupboards, close to curtains or flammable material.**

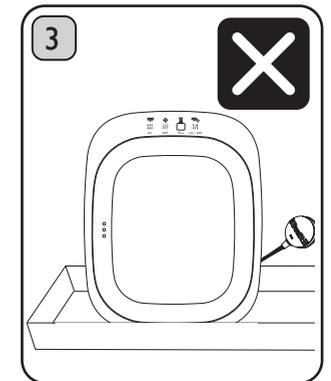


Ensure that the UV Steriliser is placed on a heat resistant work surface. Do not operate on a tray. Do not let the cord hang over the edge of work surfaces or touch hot surfaces. **Risk of fire.**

# ASSEMBLING

Always ensure the UV Steriliser is unplugged from the mains before assembling and disassembling. The Power Cord is packed separately.

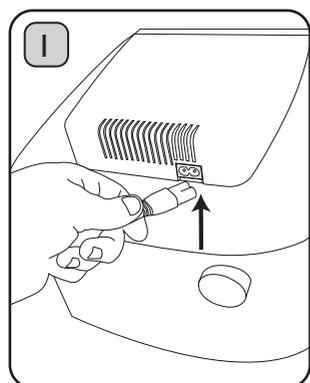

Firmly insert the Power Cord into Inlet located below the box on the rear of the Body.

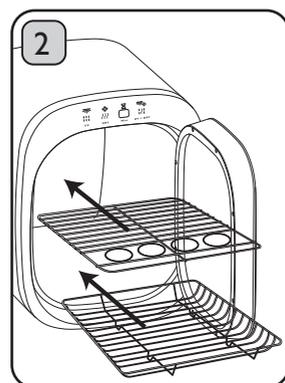

Open the Door and carefully cut the cable tie that is tied to the shelf, then place the Upper Rack in the middle and the Lower Rack on the bottom.

# USING YOUR STERILISER

The UV Steriliser has three functions: UV, Dry and UV and Dry. Each function has several programs allowing you to fine tune the functions or alter the time depending on how the appliance is loaded. Details of this can be found on the Function and Program Chart on page 11.

Before first use or after a month of no use, select the UV and Dry cycle button to clean and deodorise the insides of the UV Steriliser.

If your power cuts or you disconnect power supply during a cycle, the next time the UV Steriliser is energised it will continue from where it left off. This is a safety feature that has been enabled to ensure items are sterilised in the event of a power interruption. If you want to cancel this cycle when switched back on, tap through the highlighted Function until the Time Display shows two dash marks.

**Warning:** If using both racks ensure that you select the longest time for the UV Function. **Caution:** Using the shorter cycle may result in sterilisation being incomplete; risk of bacterial or viral contamination.


# FUNCTION AND PROGRAM CHART

| FUNCTION  | NO OF BUTTON PRESSES | PROGRAM                               | TIME                                    | RACKS IN USE                                      | REC. ITEMS  | ITEMS TO AVOID  |   |
|---|----------------------|---------------------------------------|---|---|---|---|---|
| <br><br><b>UV</b>                                   | x1                   | UV Sterilise and Deodorise            | 15 mins                                 | Items on one rack only                            | Mobile phones, remote controllers, jewellery, watches, items which do not need drying or are susceptible to heat  | Items made from Latex or dry natural rubber   |   |
|   | x2                   | UV Sterilise and Deodorise            | 25 mins                                 | Items on both racks                               |   |   |   |
|   | x3                   | Ends Cycle                            |   |   |   |   |   |
| <br><br><b>Dry</b><br><br><b>DOES NOT STERILISE</b> | x1                   | Dry Only                              | 15 mins                                 | Items on one rack only                            | Cutlery, dishes, water bottles, items to dry only and not sterilise. Chamber reaches max 60°C.                    | Electricals, delicate clothing, items susceptible to heat   |   |
|   | x2                   | Dry Only                              | 20 mins                                 | Items on both racks                               |   |   |   |
|   | x3                   | Deodorise Only                        | 10 mins                                 | Items on both racks                               |   |   | Shoes, clothes, items you want to deodorise that are susceptible to heat and UV light                 |
|   | x4                   | Ends Cycle                            |   |   |   |   |   |
| <br><br><b>UV and Dry</b>                           | x1                   | Dry, UV Sterilise and Deodorise       | 35 mins                                 | Items on one rack only                            | Bottles (plastic, glass, stainless steel), bottle teats and dummies (silicone), sippy cups, soft toys, toothbrush | Electricals, delicate clothing, items susceptible to heat and items made from Latex or dry natural rubber |   |
|   | x2                   | Extra Dry, UV Sterilise and Deodorise | 55 mins (includes 20 mins extra drying) | Items on both racks and/or particularly wet items |   |   | Dishcloth, sponge, items that do not dry completely from UV and Dry x1 (wring out excess water first) |
|   | x3                   | Ends Cycle                            |   |   |   |   |   |


# USING UV FUNCTION

Do not open the door mid-cycle as items will not be sterilised. If you need to add or remove an item, cancel the cycle and start it again.


Before using this function check UV-C Bulbs are working by pressing UV Button. Both Bulbs should glow and the Chamber will illuminate Blue, press UV twice to end cycle.

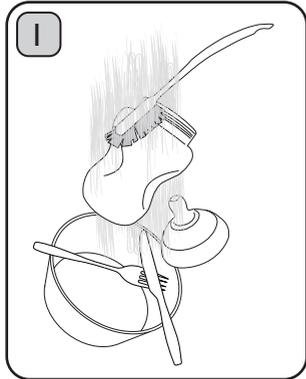


Only place clean items into the product. Wash dirty items with warm soapy water and dry thoroughly before sterilising. Tip: Efficiency decreases if there is residual moisture in the product.

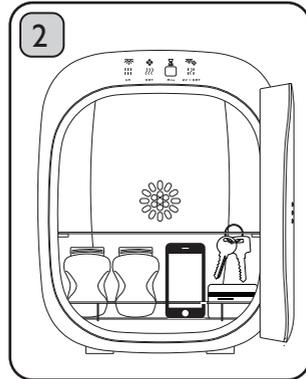


Place bottles or cups upright, facing the UV light. **Warning: Do not stack. Items need to be exposed to the UV light to sterilise.** Ensure larger items do not cover or block the circulation vents.

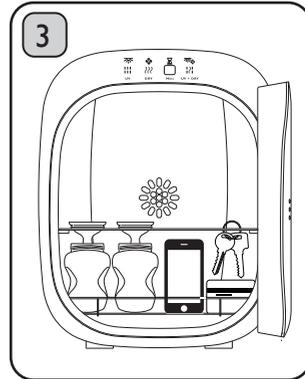


Place bottle teats upside down in the round rings installed on the Upper Rack. This increases the sterilisation efficiency. Plug in the UV Steriliser to the mains.

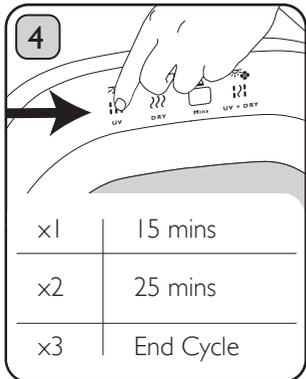

Repeatedly touch the UV Function Button to scroll through to your preferred time, if using both racks ensure you select the longer time, refer to the function & program chart on page 11. The inside of the UV Steriliser will illuminate Blue.

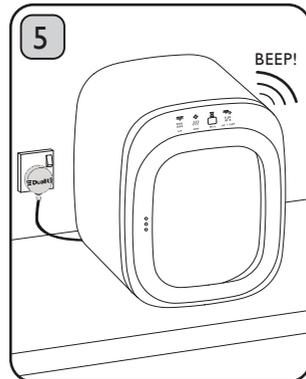


When the cycle ends the UV Steriliser will beep once and the interior light turns off. Items will remain sterile for up to 24 hours as long as you do not open the door.

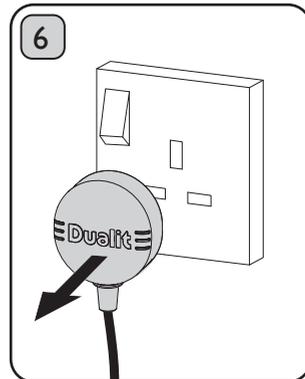


Open the door and remove your products. Unplug the UV Steriliser when not in use, then follow cleaning instructions on page 15.

# USING DRY FUNCTION


This function **⚠ DOES NOT STERILISE**. Due to this, items can be removed or replaced mid-cycle. The countdown will continue once the door is shut. For sterilisation use either UV or UV and Dry.

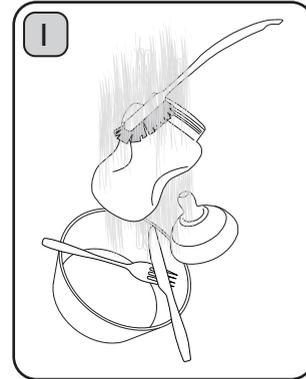


Only place clean items into the product. Wash dirty items with warm soapy water.

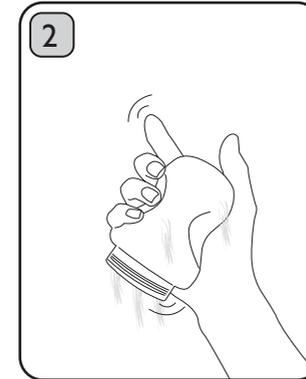


Always shake off excess water from washed products before placing in the UV Steriliser. Tip: Efficiency decreases if there is residual moisture in the product.

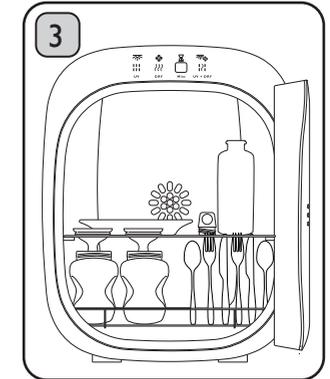


Place items upright, do not stack. Ensure larger items do not cover or block the circulation vents. Place bottle teats upside down in the round rings installed on the Upper Rack.

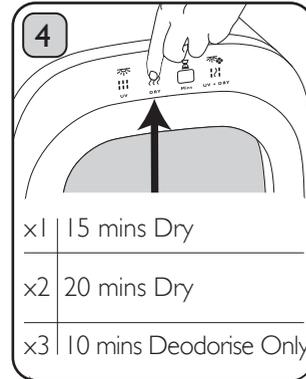

Repeatedly touch the Dry Function Button to scroll through to your preferred time and whether you would like to Dry or Deodorise your items, refer to the function & program chart on page 11. The inside of the UV Steriliser will illuminate red.

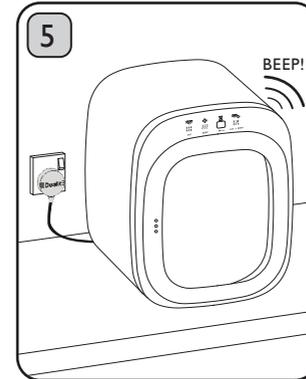

When the function ends the UV Steriliser will beep once and the interior light turns off.

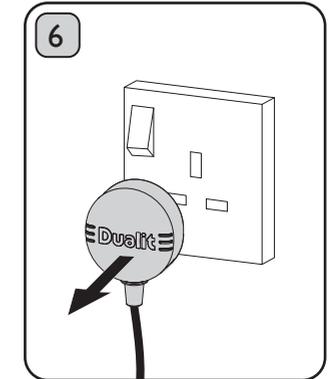


Open the door and remove your products. Unplug the UV Steriliser when not in use, then follow cleaning instructions on Page 15.


# USING UV AND DRY FUNCTION

Do not open the door mid-cycle as items will not be sterilised. If you need to add or remove an item, cancel the cycle and start it again. Tip: Efficiency decreases if there is residual moisture in the product.


Before using this function check UV-C Bulbs are working by pressing UV Button. Both Bulbs should glow and the Chamber will illuminate Blue, press UV twice to end cycle.

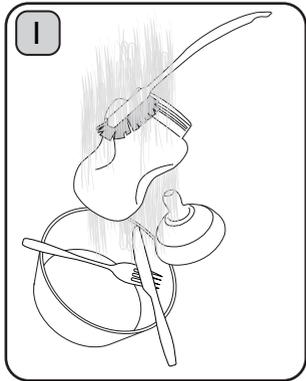


Only place clean items into the product. Wash dirty items with warm soapy water. Always shake off excess water from washed products before placing in the UV Steriliser.

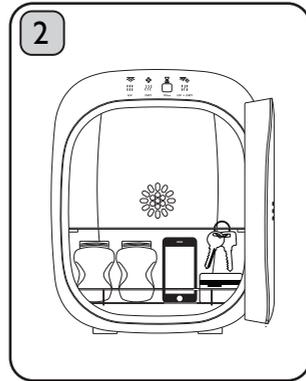


Place items upright, facing the UV light. **Warning: Do not stack. Items need to be exposed to the UV light to sterilise.**

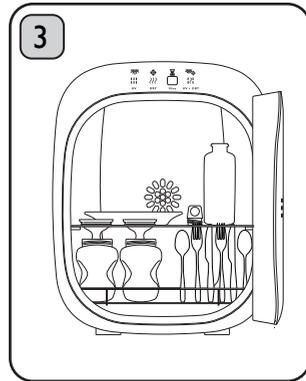


Ensure larger items do not cover or block the circulation vents. Place bottle teats upside down in the round rings installed on the Upper Rack. This increases the sterilisation efficiency.

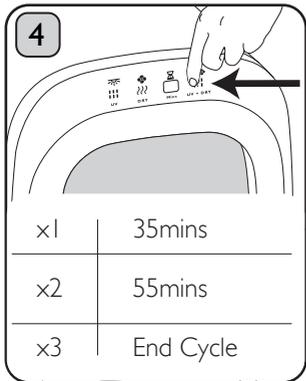

Plug in the UV Steriliser to the mains. Repeatedly touch the UV and Dry Function Button to scroll through to your preferred time, refer to the function & program chart on PI I. The inside of the UV Steriliser will illuminate Red then Blue. Tip: For particularly wet items, run on a Dry Function first.

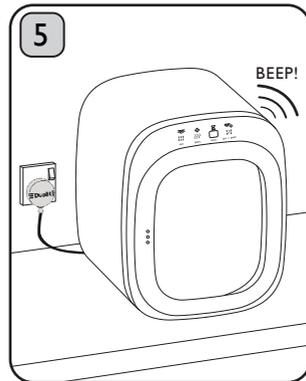


When the function ends the UV Steriliser will beep once and the interior light turns off. Items will remain sterile for up to 24 hours as long as you do not open the door.

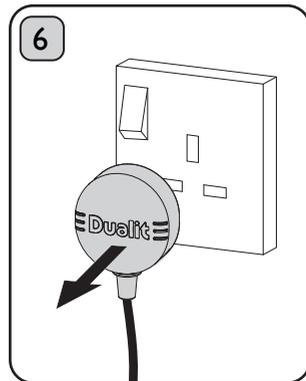


Open the door and remove your products. Unplug the UV Steriliser when not in use, then follow cleaning instructions on page 15.

# CLEANING & CARE


Before cleaning make sure the machine is switched off, unplugged and allowed to cool. Dualit recommends cleaning your UV Steriliser after every use. **Do not submerge the Body, Power Cord or plug into water or other liquid, or position under a water tap. Do not use sharp, abrasive or aggressive cleaning agents, bleach or scouring pads to clean the UV Steriliser. The use of such cleaning implements may affect the life of the UV Steriliser.**

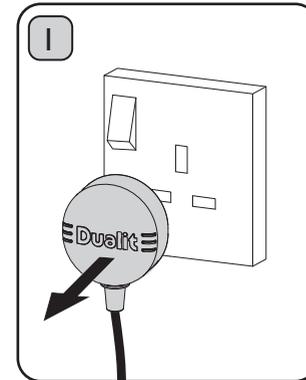


Unplug the Steriliser from the mains and allow to cool down completely before cleaning.

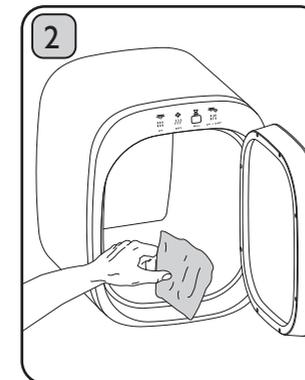


Wipe the interiors clean with a soft, dry cloth.

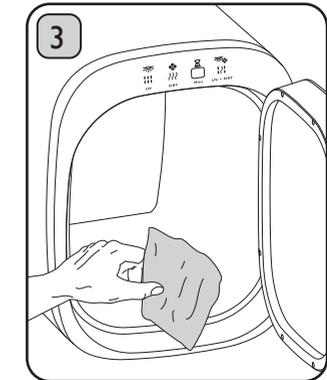

For water stains, wipe the interiors with a warm, damp cloth followed by wiping down with a dry cloth (do not wipe the bulbs).

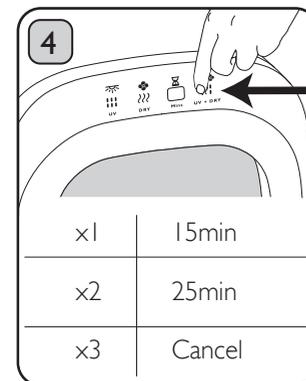

Once a month, press the UV and Dry cycle button to clean and deodorise the insides of the UV Steriliser, Upper Rack and Lower Rack, with nothing else inside it.

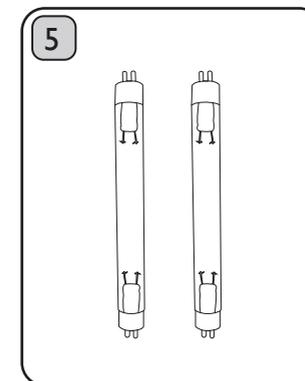

Once a year, replace the two UV-C Purification bulbs for maximum sterilisation. Make a note of when you first used/replaced the bulbs to ensure that you replace annually.




**When not in use, clean and dry the UV Steriliser and store in a cool, dry place. Not replacing the bulbs can result in risk of bacterial or viral contamination.**


# REPLACING BULBS

UV-C Bulbs decrease in effectiveness over time, therefore Dualit recommends replacing annually. Not replacing the bulbs can result in **risk of bacterial or viral contamination.**


## To remove the existing bulbs

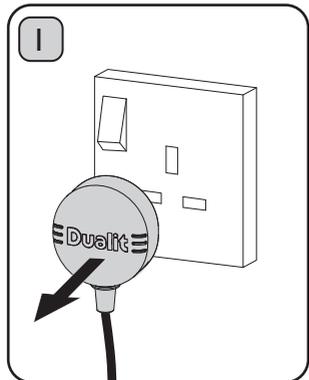

Unplug the UV Steriliser from the mains and allow to cool down completely before replacing the Bulbs.

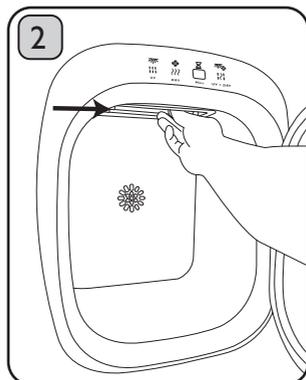


Open the door and reach into the UV Steriliser, taking hold of the Bulb.

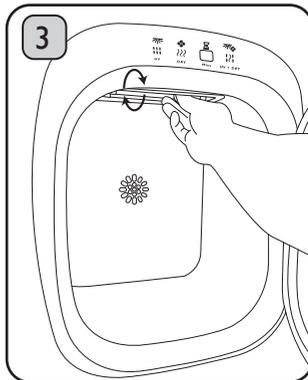


Roll the Bulb within the fitting towards you by 90 degrees. You will hear a quiet click as the Bulb is disconnected and comes loose.



## To insert a new bulb

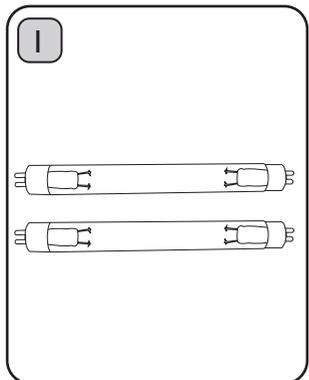

Make sure the UV Steriliser is unplugged. Hold the Bulb so that the pins are vertically aligned.

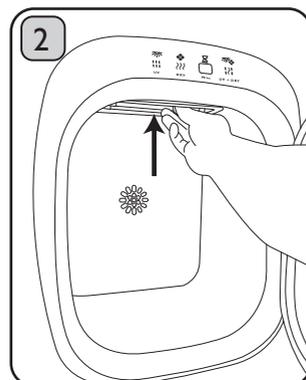

Align the pins with the slots at either end of the Bulb fitting and push up into place.



Roll the Bulb away from you within the fitting by 90 degrees until you hear a click. The Bulb is now fitted into position.

**Warning:** After replacing Bulbs check UV-C Bulbs are working by pressing UV Button. Both Bulbs should glow and the Chamber will illuminate Blue, press UV twice to end cycle. Do not touch Bulbs with fingers. Use a dry paper towel or cloth to avoid fingers touching the Bulbs. Skin oil will harm UV Bulbs. If the Bulbs don't glow, ensure they are correctly fitted.

# TROUBLESHOOTING



| POSSIBLE CAUSE(S)   | SOLUTION(S)  |
|---|--|
| <b>THE UV STERILISER DOES NOT TURN ON</b>   |  |
| The UV Steriliser may not be properly connected to the power supply.  | Check the plug is in the socket, the Power Cord is inserted into the Inlet and the switch is turned on.  |
| The UV Steriliser plug fuse may have failed.  | Replace the plug fuse if necessary and check your residual current device (RCD). Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as the original. Replacement fuses are available and should be ASTA approved to BS1362. |
| The UV Steriliser works but the Function Icons do not illuminate.   | The LED Light Bulb may have blown and cannot be replaced. Call customer services on 01293 652500 for further information.  |
| There is no illumination inside the UV Steriliser (Blue for UV, Red for Dry and Red and Blue for UV and Dry). | The UV Bulbs may have blown, replace both Bulbs. Call customer services on 01293 652500 for further information. Check if UV-C bulbs are fitted, if a Bulb is not fitted call customer services on 01293 652500 for further information.                                     |
| The Door has not been fully shut into place.  | Ensure that the Door is closed fully. The time display will spell out 'door' if left open.   |
| <b>MY ITEMS HAVE NOT DRIED</b>  |  |
| The wrong function may have been used.  | Ensure you have pressed the Dry button only once or twice.   |
| The item is particularly wet or there are too many items inside and needs longer.                             | Put the item through a longer cycle, such as UV and Dry (pressed twice for 55 minutes). Put less items into the UV Steriliser, space items out for best results.   |
| <b>MY ITEMS STILL SMELL</b>   |  |
| The wrong function may have been used.  | Use a UV and UV and Dry functions to deodorise or try using the dedicated deodorise function (press Dry 3 times). Pressing Dry once or twice will not deodorise.   |
| <b>MY UV STERILISER SMELLS</b>  |  |
| The UV Steriliser may need deodorising.   | Run a UV and Dry function, selecting once for 35 minutes, to clean and deodorise the insides of the UV Steriliser.   |
| The UV Steriliser may have had unclean items put inside.  | Wipe the interiors with a warm, damp cloth followed by wiping down with a dry cloth. Then run a UV and Dry function, selecting once for 35 minutes, to clean and deodorise the insides of the UV Steriliser.   |

# GUARANTEE

This appliance is of excellent quality and construction. However, if any defects in materials or workmanship do appear during the relevant guarantee period, we will, at our discretion, either repair or replace the defective parts, free of charge, subject to the terms and conditions of our Guarantee shown below.

This Guarantee covers both parts and labour. Carriage is not included.

Your Guarantee period is as follows:

- 1 year

This Guarantee provides benefits which are additional to, and do not affect, your statutory rights. This Guarantee does not cover the cost of returning the product to the dealer from whom it was purchased or to ourselves. This Guarantee applies only to products sold and located in mainland Great Britain. It does not cover liability in respect of or replacement of plugs, cables or fuses and also does not cover defects due to:

- Failure to use or maintain product in accordance with Dualit's instructions.
- The product being connected to an unsuitable electricity supply.
- Accidental damage to or abuse or misuse of the product.
- Product modification, except by Dualit or approved agent.
- Dismantling of or interference with the product.
- Theft or attempted theft of the product.

Before returning any product under this Guarantee, please check that:

- You have followed the product instructions correctly.
- Your mains electricity supply is functional.
- The defect is not due to a blown fuse.

If you wish to claim under this guarantee you should:

- Send the product, postage or carriage paid, to the dealer from whom it was purchased or to Dualit direct.
- Ensure that the product is clean and packed carefully (preferably in its original carton).
- Enclose details of your name, address and telephone number and when and where the product was purchased, together with proof of purchase (e.g. a till receipt).
- Give exact details of the nature of the defect.

This Guarantee does not cover any other claims whatsoever, including, without limitation, any liability for incidental, indirect or consequential damage, nor does it cover any claims for conversion or modification or for the costs of repair carried out by any third party without the prior consent of Dualit. If replacement parts are fitted to the product this will not extend the period of the Guarantee.

For further advice contact the Dualit customer helpline on +44 (0)1293 652 500 (09:00 to 17:00 Monday to Friday).

Alternatively, email Dualit at [info@dualit.com](mailto:info@dualit.com) or visit [www.dualit.com](http://www.dualit.com)

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in to an official collection point for recycling. By doing this you help preserve the environment.



## INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose of this product in the usual household garbage at the end of its life cycle. Please hand it over to a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instruction of use or the packaging will inform you about the methods of disposal. The materials are recyclable as mentioned on its marking. By recycling, material recycling or other forms of re-utilization of old appliances you are making an important contribution to protect our environment. Please inquire at the community administration for the authorised disposal location.

## DON'T FORGET TO REGISTER YOUR PRODUCT

Take a minute to register your product with us to receive these outstanding benefits:

1. **Fast and efficient customer service** important safety advice, access to manuals and product information should you require assistance with your purchase.
2. **A library of mouth-watering recipes** and regular articles and blogs.
3. **Be the first to hear** about exciting new Dualit products.

**Dualit recommends safety first:** please register your product so that we can contact you in the unlikely event that a safety notification is issued. Remember to keep your receipt as proof of purchase.

DON'T FORGET TO REGISTER YOUR PRODUCT

[WWW.DUALIT.COM/REGISTER](http://WWW.DUALIT.COM/REGISTER)

OR BY POST



Register  my appliance



A **feeding** and **weaning** range designed to make everyday baby life that bit **easier**.

ORDER THE FULL RANGE AT  
[www.dualit.com](http://www.dualit.com)



Dualit Limited County Oak Way Crawley West Sussex RH11 7ST  
+44(0)1293 652 500 [info@dualit.com](mailto:info@dualit.com) [www.dualit.com](http://www.dualit.com)

GB-A